

Honeywell Vista Quick Reference Card

the instructions on this card will guide you through the basic functions of your Vista panel. For additional questions, you can consult the user manual or call technical support at 604-854-8055



Arm and Disarm Your System

To arm all of your sensors (including motion detectors)

- Press Master Code > [2 AWAY]

To arm all of your sensors (excluding any motion detectors)

- Press Master Code > [3 STAY]

To disarm your system

- Press Master Code > [1 OFF]

Change Your Master Code & Adding New Codes

To change the master code on your Honeywell Vista panel, complete the following steps:

1. These steps must be done in quick fashion, otherwise it will not work.
2. Type in your Master Code, followed by 802, followed by your new Master Code twice in a row.
3. For example, if my current Master Code were 1234, and I wanted to change it to 9876, I would type in:
[1][2][3][4][8][0][2][9][8][7][6][9][8][7][6]
4. Panel will give you a confirmation beep afterwards if this is done correctly.

To create a secondary code (ex. User 03) for other users,

- Press Master Code > [8][0][3] > New User Code.

Your system can accommodate up to 13 additional users as follows: 03, 04, 05, etc. up until 15. These secondary codes cannot create, change, or delete any other four-digit user codes. The Master Code is the only code that has this permission.

Enable & Disable Chime Function

To turn on the chime on your Honeywell Vista Panel, complete the following steps:

1. On your alarm panel, type in # and then chime. [#][9].
2. This will turn the chime on your alarm panel on and off.

Bypass Sensors

To bypass a sensor using your Honeywell Vista panel, complete the following steps:

1. On your alarm panel, type in your master code, followed by 6 (bypass), followed by the zone number you'd like to bypass.
2. For example, if I want to bypass my back door sensor, which is zone 03, I would type in:
[1][2][3][4][6][0][3].
3. After this, your panel should display "bypass" on the screen.
4. Now if your panel is armed, zone 03 back door will be bypassed until you disarm the system once again.

Adjust Panel Volume

To turn up the volume on your Honeywell Vista panel, complete the following steps:

1. On your alarm panel, the 2 key is also the volume key. The 3 key is also the up key. The 6 key is also the down key.
2. To increase the volume on the keypad, press [#]+[2]+[3]. Repeat until desired volume is reached.
3. To decrease the volume on the keypad, press [#]+[2]+[6]. Repeat until the desired volume is reached.

